

**MODEL 9840S (Right Hand) – Product flow from left to right from operator side.**  
**MODEL 9940S (Left Hand) – Product flow from right to left from operator side.**

